



Top left remove 2 holding screws

Top right remove plate, have needle at its highest point

Bottom left note position of the shuttle, remove from machine and inspect, if you find any holes, scrapes, burrs, a broken needle may have damaged this .recommend replace with new part

Be sure to correctly insert new part, replace plate, tighten screws. Be sure to have a new needle in the machine.